


ISSUE:	DRAWN BY:	CHECKED BY:	CRF No:	DATE:	DESCRIPTION:
a	SJ	KB	2796	06/09/22	First Issue
b	YZL	KB	2958	19/05/23	Replaced SA070 with KLS2
c	SJ	KB	3596	14/10/25	Added SA538
d					
e					
f					
g					
h					
i					
j					
k					
l					
m					






MA3PR/FL KammBar

Instructions




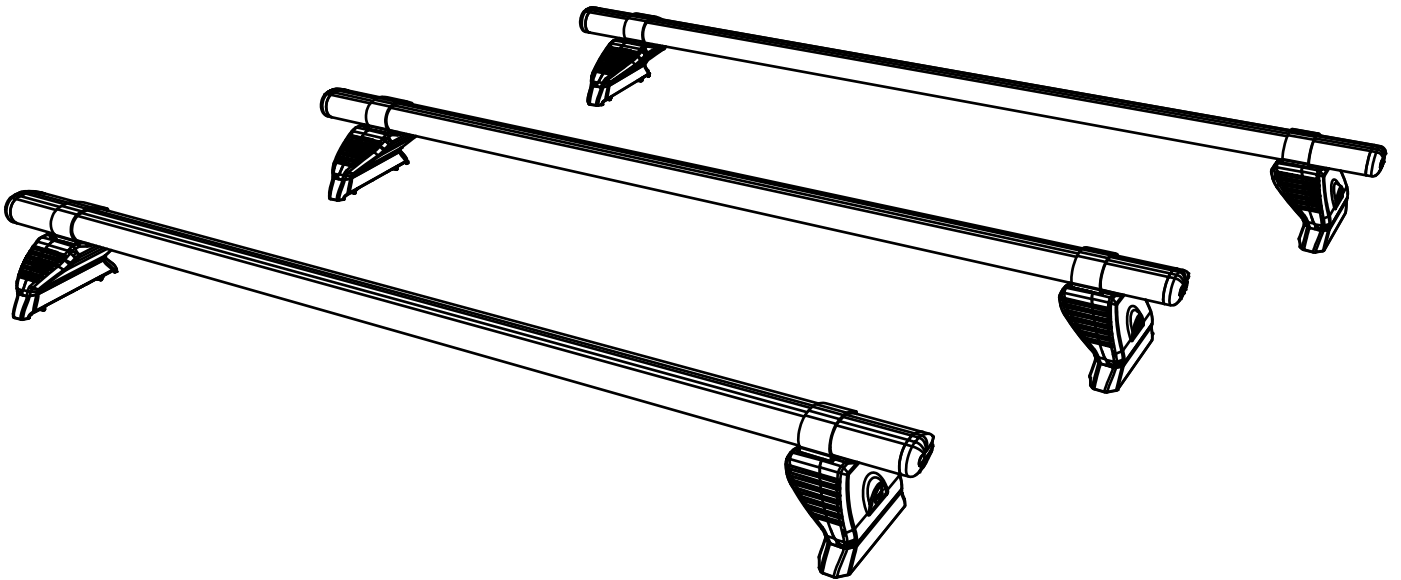


CITY CRASH (✓)




According to ISO/ PAS 11154:2006

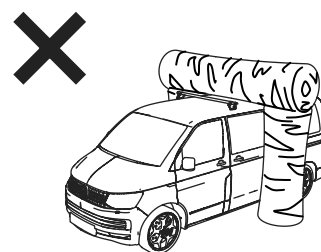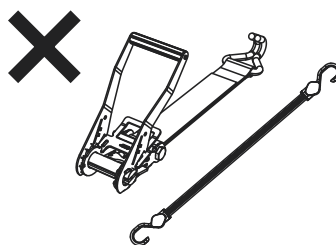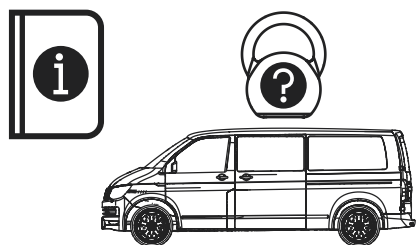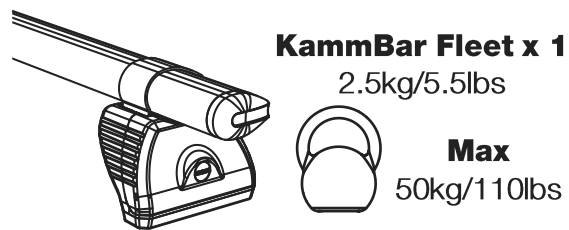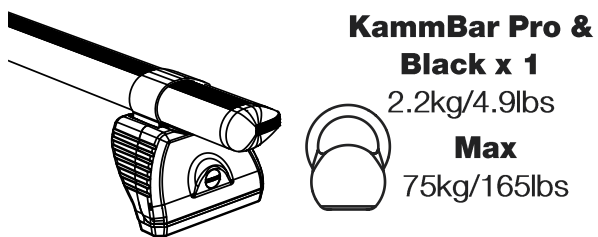







KammBar Pro & Black

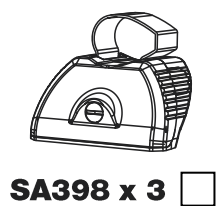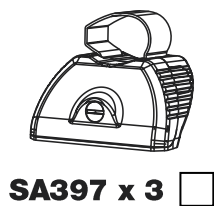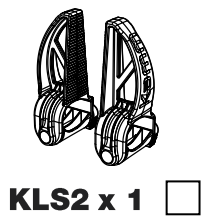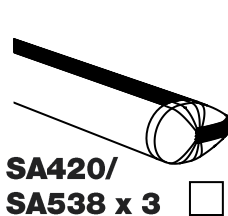


KammBar Fleet

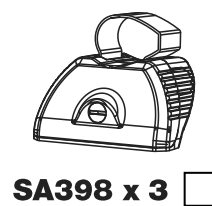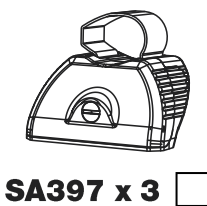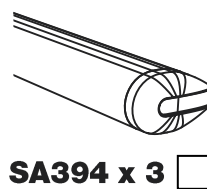


Fitting Kit

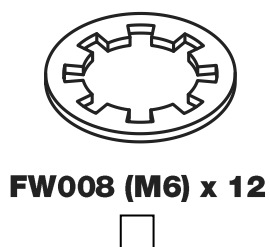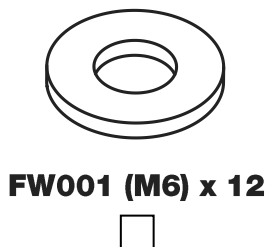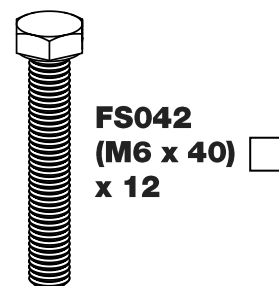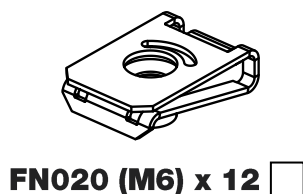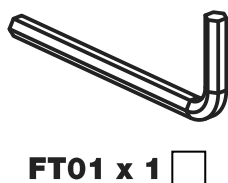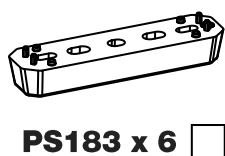


1.

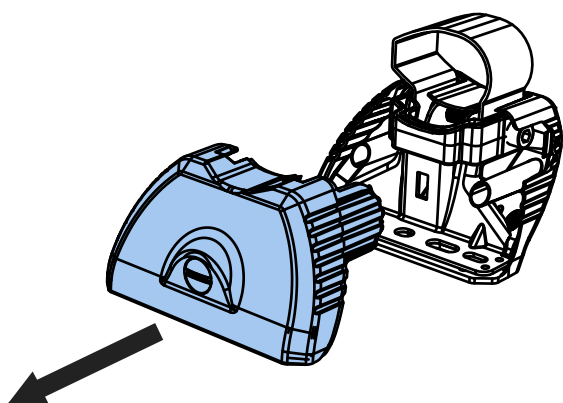

2.

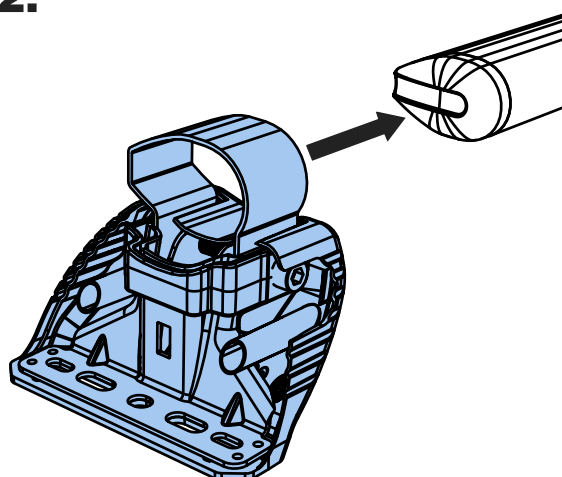


3.



SA397

PS183




SA397

PS183




SA397

PS183

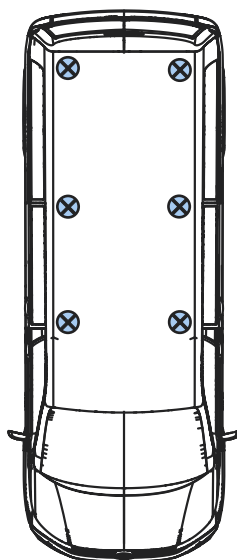


SA398




PS183

SA398




PS183

SA398




PS183


4.

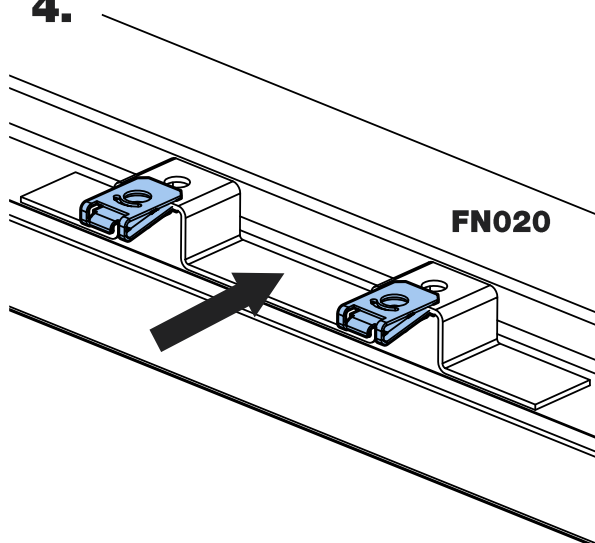


5.

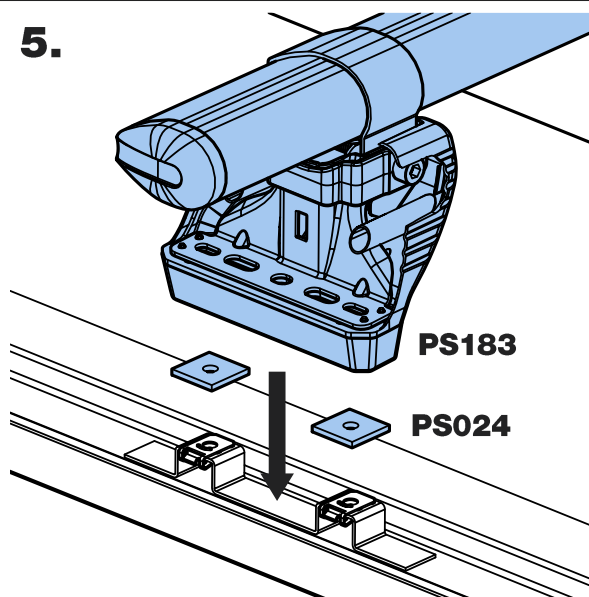


6.

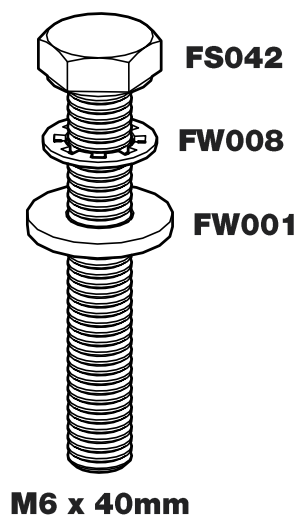


7.

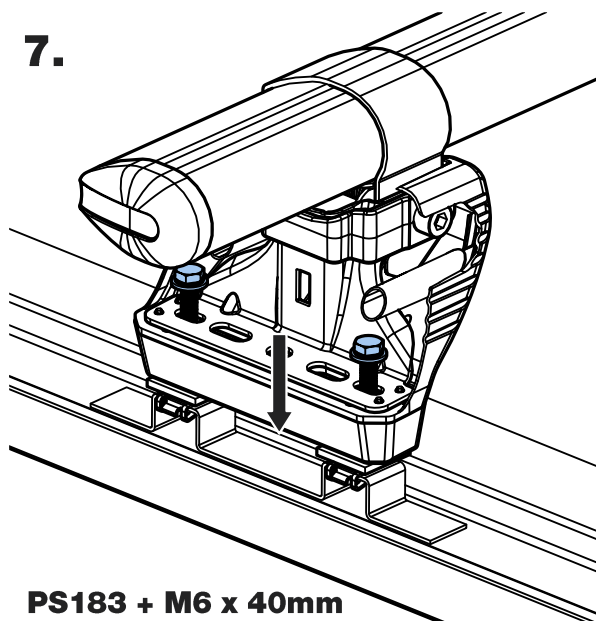


8.

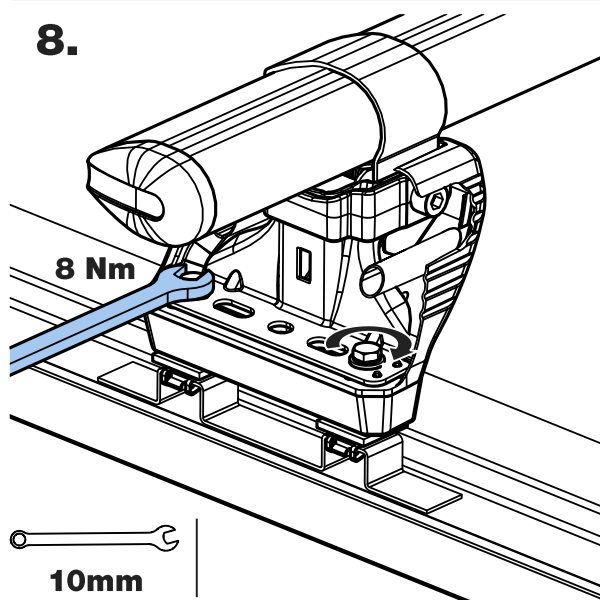


9.

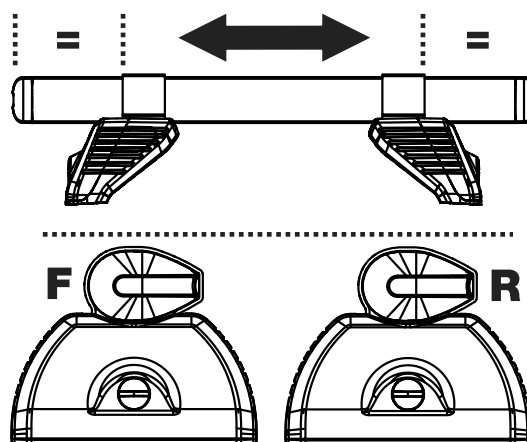


10.

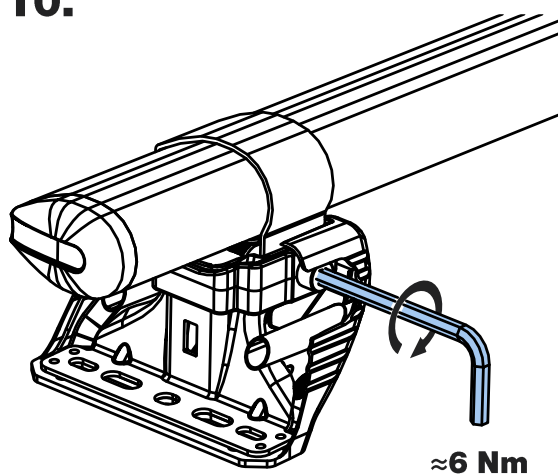

11.

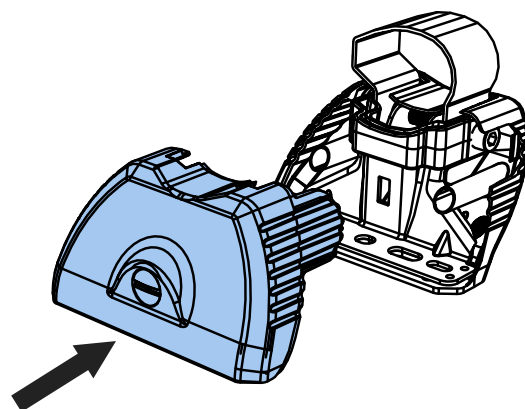

12.

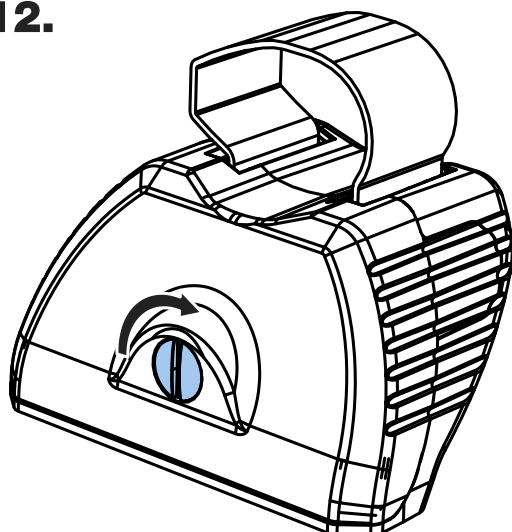

13.

