






# VA1PR KammBar

## Instructions



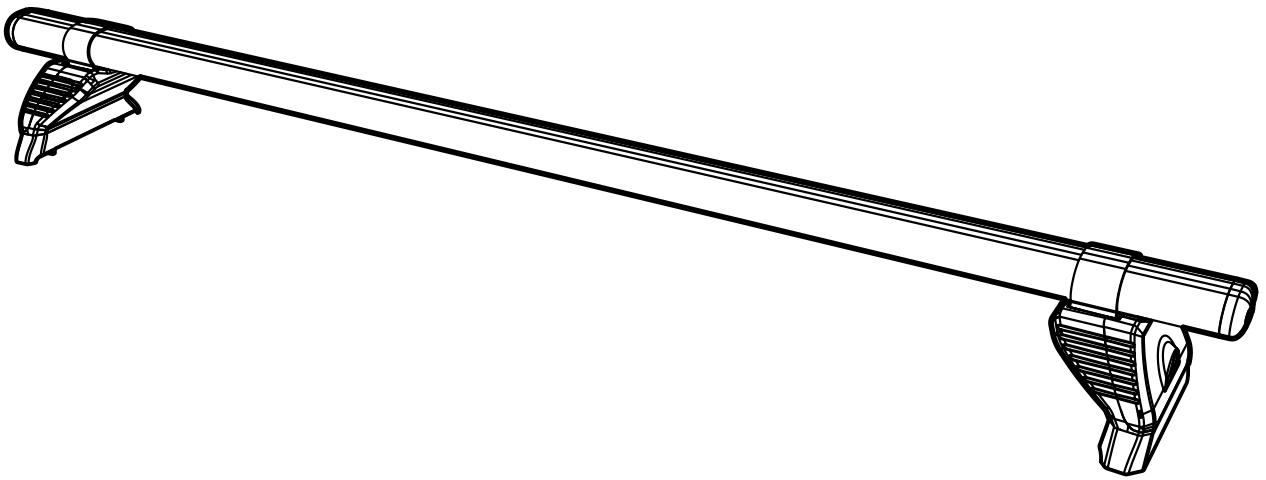


**CITY CRASH (✓)**




According to ISO/ PAS 11154:2006

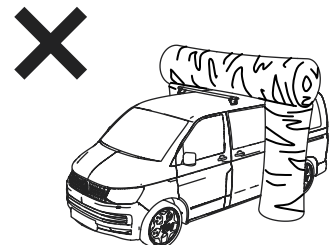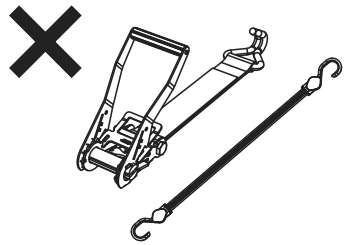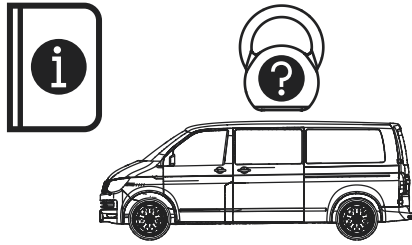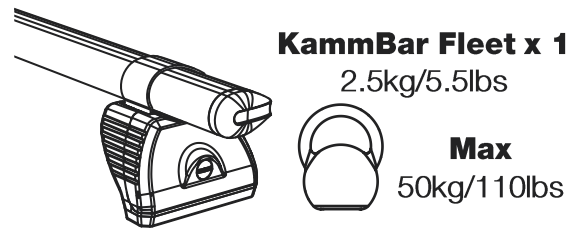









### KammBar Pro & Black

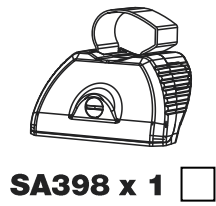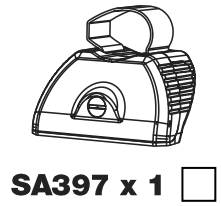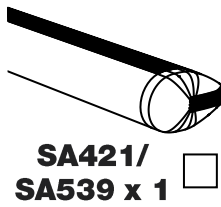


### KammBar Fleet

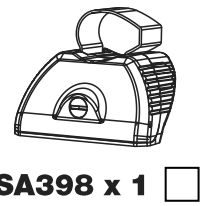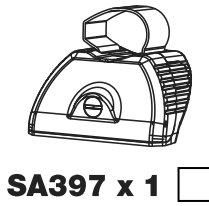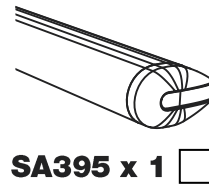


### Fitting Kit

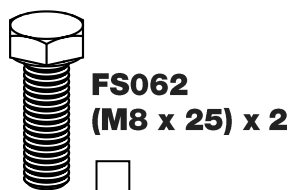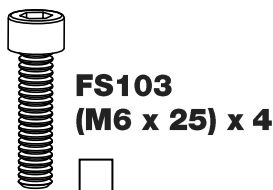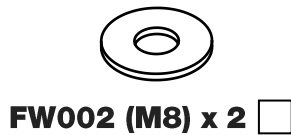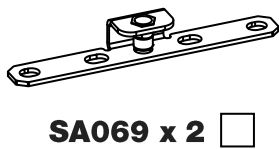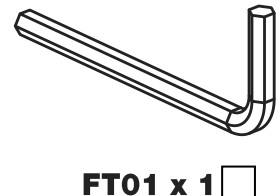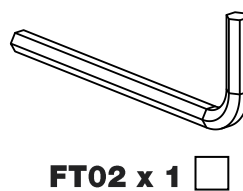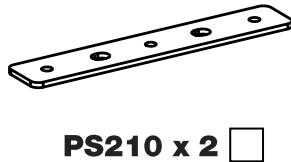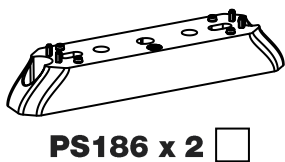


1.

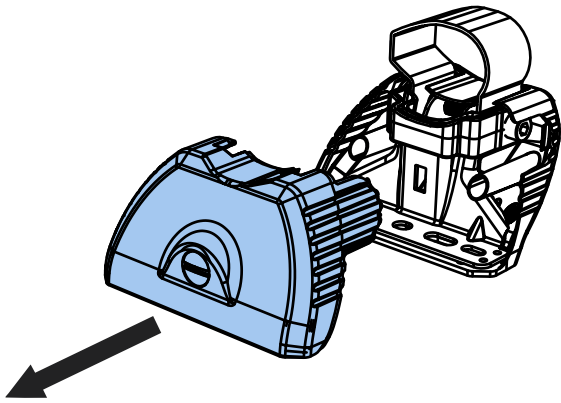


2.

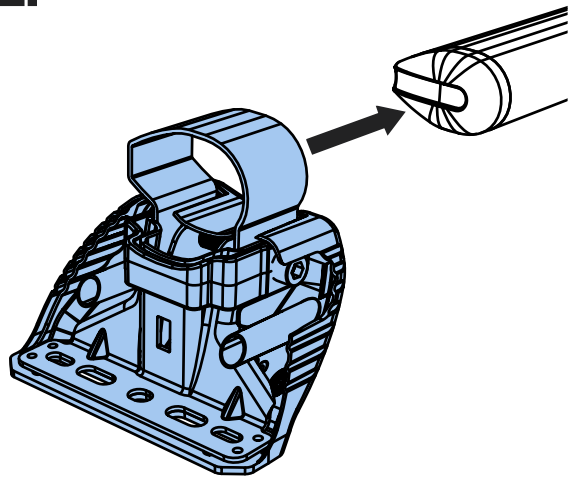


3.



**SA397**  
**PS186**  
**SA069**

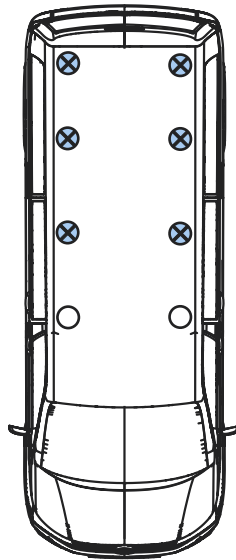

**SA398**  
**PS186**  
**SA069**



4.

**FS103**




**FS062**







**FW001**  
**PS209**

**FW002**


**M6 x 25mm**

**M8 x 25mm**

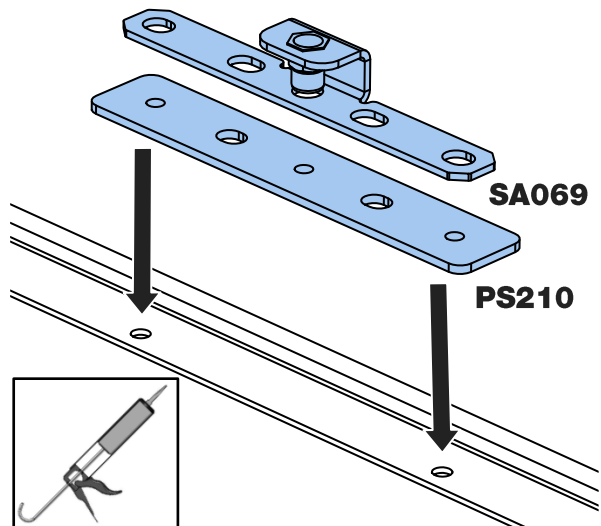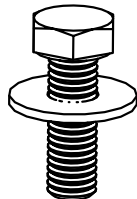


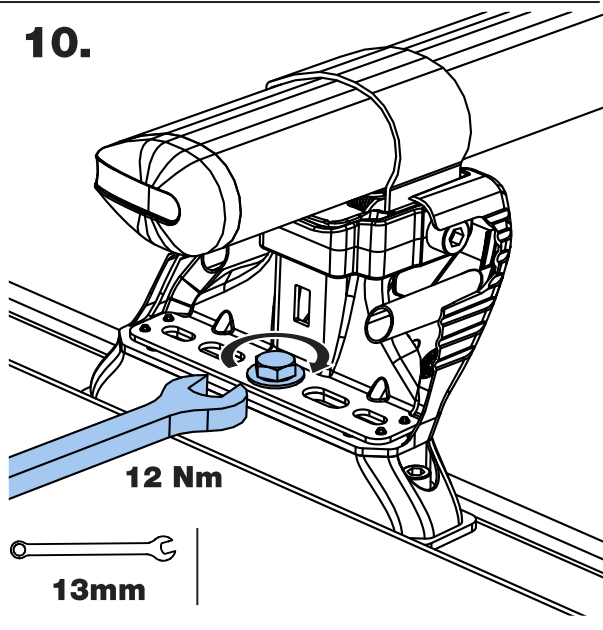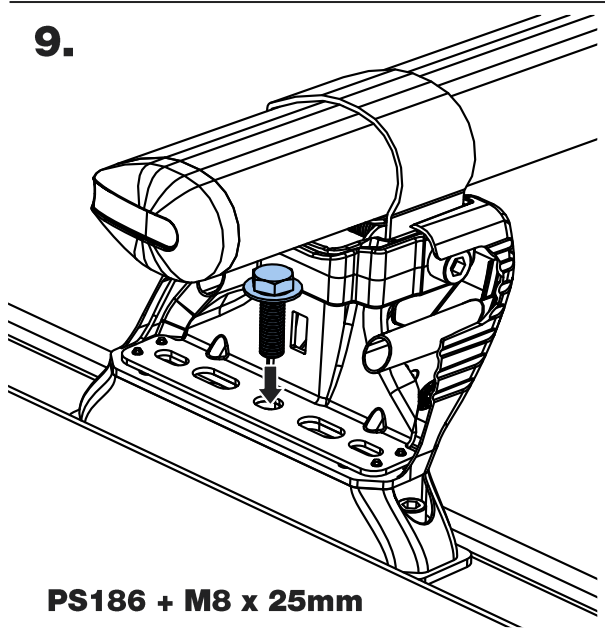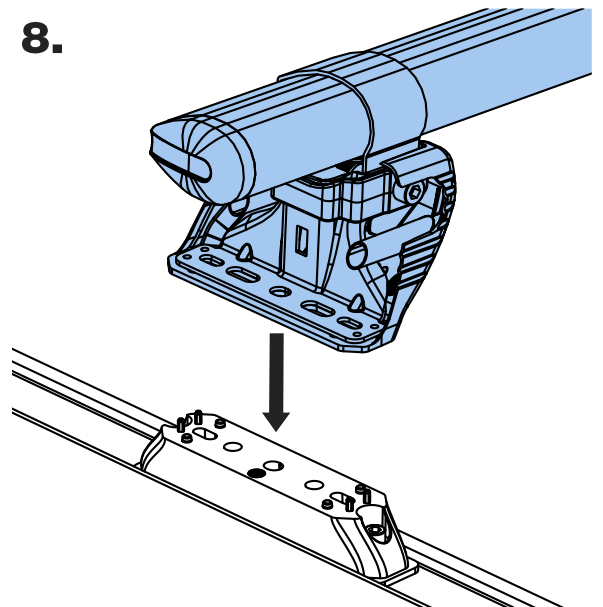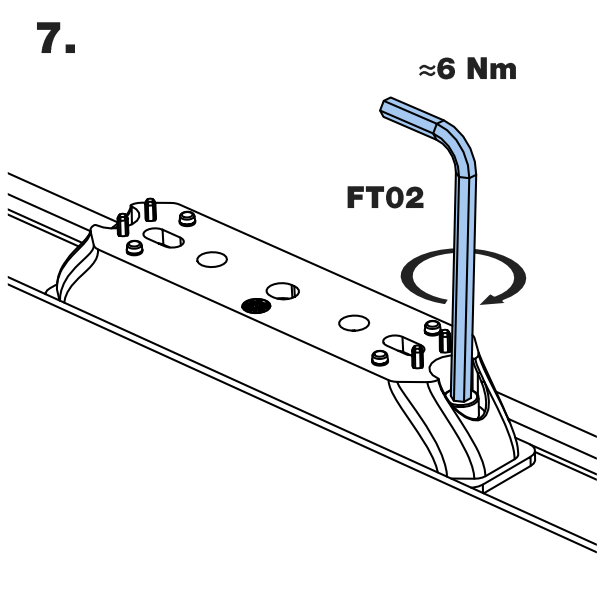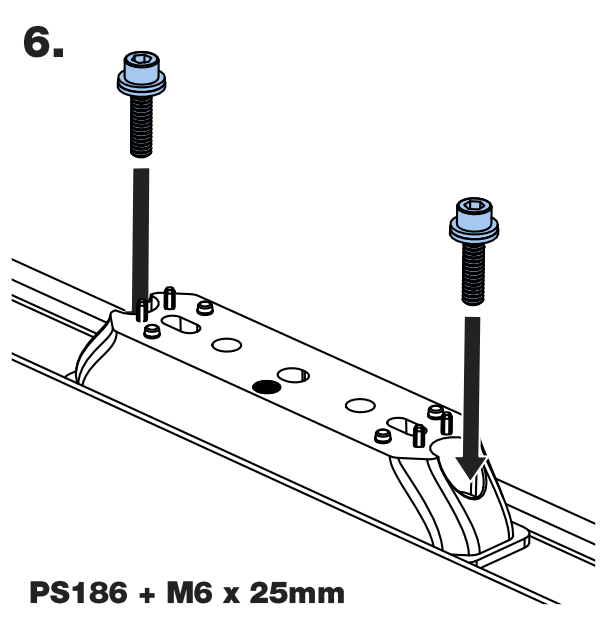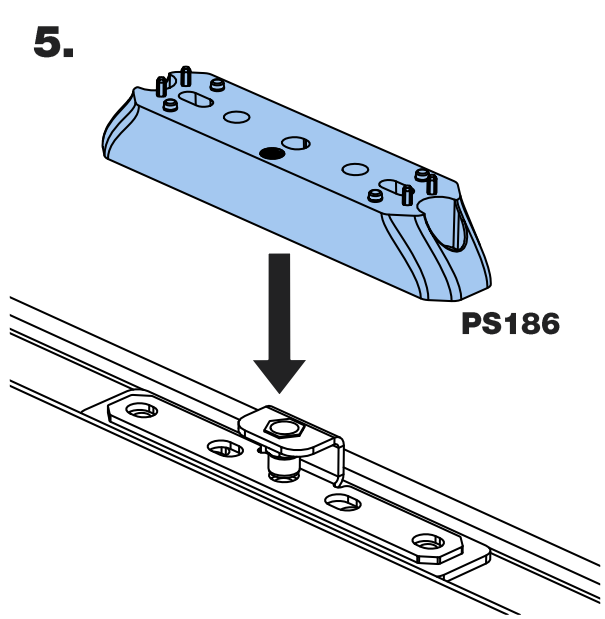


17.

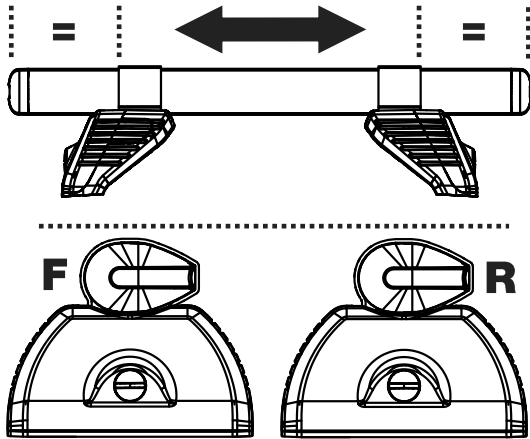

18.

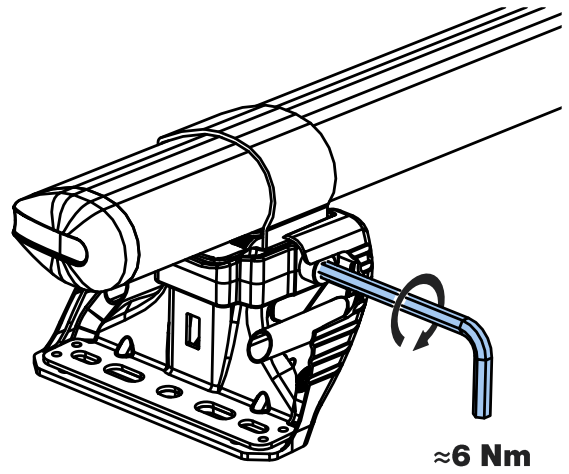

19.

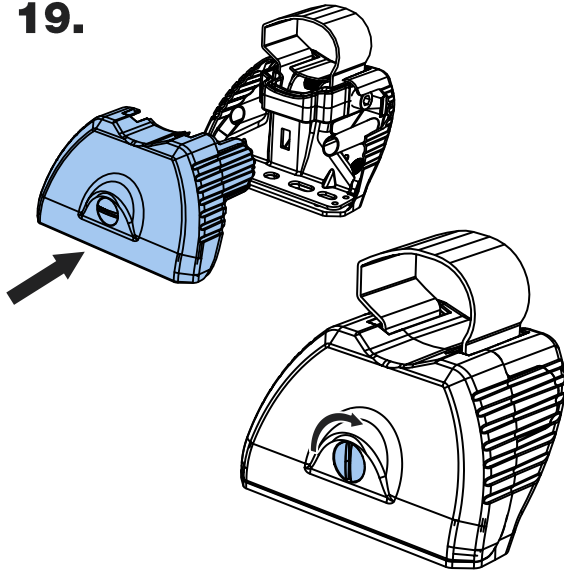

20.

